


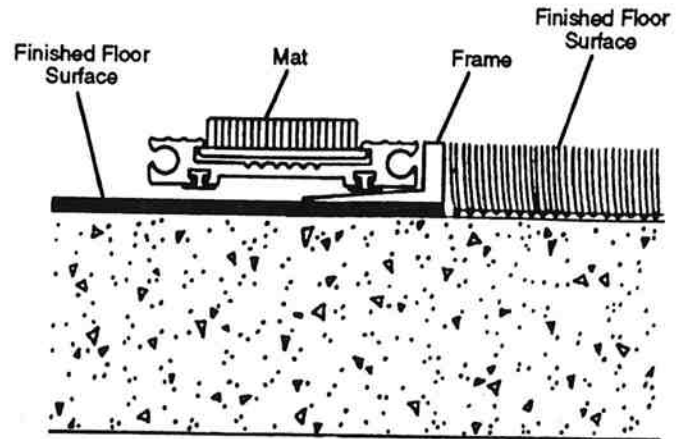

This frame is for surface
or recess mounting.

1. Prepare the floor

Prepare the area on the flooring where the mat will be located.



2. Drill anchor holes


The mat frames should be secured to the concrete floor using anchor bolts into lead anchors that are set into the floor.

Drill holes in the frames at about 2-ft (6-m) intervals for the bolts. Countersink the holes.

Set the frames into the recess at the appropriate locations to position the mat(s). Mark the hole locations on the concrete.

Remove the frames and drill holes in the floor for the anchors.

Install the anchors using an anchor setting tool.

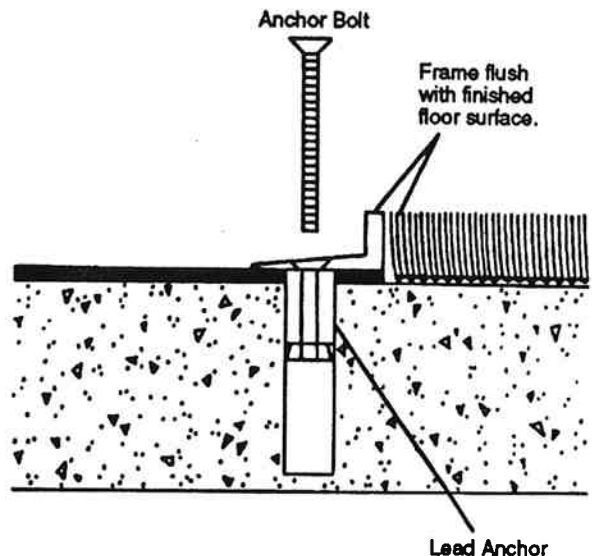

3. Secure frames in the recess

Reinstall the frames. Secure them to the floor with $\frac{1}{8}$ " x $1\frac{1}{2}$ " anchor bolts into the lead anchors.


NOTE: If necessary, shim under the frame sections so that the top edge of the frames is flush with the higher finished floor surface, and the frames are level.

4. Recheck all dimensions

Recheck that:

- The frame sides are straight
- The frame corners are at correct angles so the mat will fit properly
- All inside dimensions of the frame are accurate according to drawing measurements

IMPORTANT: The mat is made to fit snugly into the frame according to the drawing. Reese cannot be responsible for problems that result from improperly installed frames.

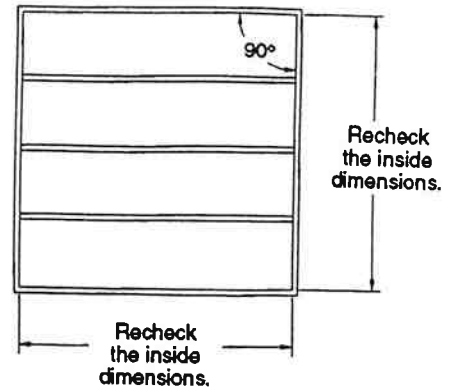

5. Protect the frame edges

When the frame is anchored, install plywood or other material inside and (if necessary) outside of the frame to protect its edges from damage until the mat is installed.

