

No. 798

Polyprene V Strip

INSTALLATION INSTRUCTIONS

- 1 All self adhesive weatherstrips must be applied on clean, dry frames between 50° F and 100° F, with end use temperatures between -30° F to 140° F.
- 2 Cut one piece of gasketing to width of frame at the top. Remove the release paper from the gasketing and mount as illustrated for the header. While pressing down each inch of the strip, be careful as not to stretch the strip. This will insure complete adhesion to the frame.
- 3 Cut two pieces of gasketing for the height of the frame and attach as shown for the lock side and for the hinge side. While pressing down each inch of the strip, be careful as not to stretch the strip. This will insure complete adhesion to the frame.
- 4 Operate door several times to make certain gasketing is adjusted properly so as not to inhibit the door from self closing and latching. Note: Do not install the strips as one continuous piece. Materials must be cut at corners where head and jambs meet. Do not overlap adhesive strips.




NATIONWIDE

Post Office Box 459, Rosemount, MN 55068-0459
(651) 423-1126 • FAX (651) 423-2662
TOLL FREE (800) 328-0953
Canadian Customers use toll free number

HINGE SIDE

LOCK SIDE & HEADER

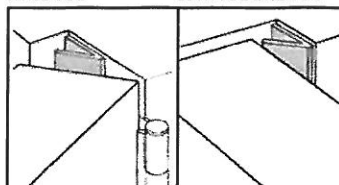

WARNING :


THE V STRIP SURFACE MUST BE PREPARED PROPERLY THUS ELIMINATING THE CHANCE OF SEPARATION BETWEEN ADHESIVE AND FRAME.

SURFACE: must be clean, dry, and free of solvents, dirt, dust, grease or oil.

PAINT: must be uniformly applied and completely dry. (Beware of quick dry primers that leave a powdered, difficult to adhere paint surface. This type of surface may respond like dust, causing a definite lack of adhesion).

NOTE: Painted or other finished surfaces of wood frames, must be non-porous and smooth.

BEST APPLICATION: Taking into account the above information, its best to try a small frame area to test the adhesion. Our adhesive tape gradually sets taking a full set in 24 hrs. Reese's V-Strip adheres to most any door frame surface. We cannot control however, what various paints and paint additives are used. Please test a door frame area before proceeding entirely.

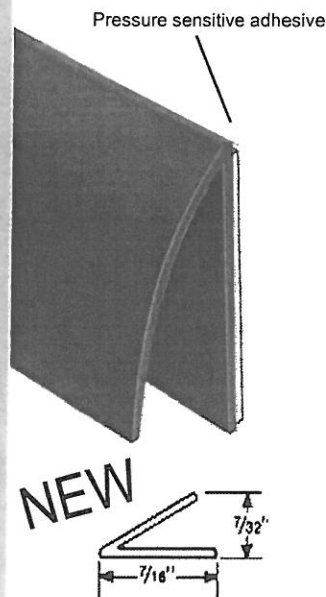

Reese SMOKE SEAL & WEATHERSTRIP

No. 798 Polyprene V Strip

Polyprene compound is better than vinyl. Soft, good low temperature flexibility and does not take compression set. More wear resistant than silicone rubber.

☐ 17 FT.
COIL

☐ 19 FT.
COIL

☐ 21 FT.
COIL

☐ OTHER



77L5

COMMERCIAL USE